

INSTALLATION AND WIRING INSTRUCTIONS

INSTRUCTIONS AND USER GUIDE



- 1** Loosen fixing screw located in the bottom of the thermostat to get the front panel.



- 2** Connect the thermostat according to the Wiring Instruction.



- 3** Insert the back panel into wall box with provided screws.



- 4** Align top part of front panel and back panel to fit these two parts. Then fix them with screw.

NOTE: Thermostat should be mounted in a 35mm deep single gang back box

PAIRING YOUR THERMOSTAT TO YOUR APP

'ProTouch WiFi' app available from



App Store



Google Play

First download the ProWarm ProTouch App from APP store or Google Play.



You should see the following App icon:

Once downloaded you will need to create an account via email and log in to the App. You Must ensure that the App has permission to access your location on your phone settings. The App will ask you this when you install it.

Please also ensure you are connected to your household WIFI during this process.


THERE ARE TWO PAIRING METHODS.

IF METHOD ONE DOES NOT WORK PLEASE ATTEMPT PAIRING METHOD TWO

PAIRING METHOD 1


Note: If you have multiple thermostats that require pairing, please turn all other devices off except the one you are trying to pair. Once paired this device can be left on whilst pairing another one.

On the thermostat you should see the WIFI symbol flashing fast (2-3 times per second). If the symbol is not on the screen press and hold the \triangle and ∇ arrows for 3 seconds you should see F1 Appear. If F2 appears, repeat until F1 appears. The WIFI symbol should now begin to flash.

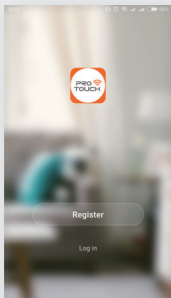


Step 1

Log in or sign up the APP through Phone No. or your Email address.

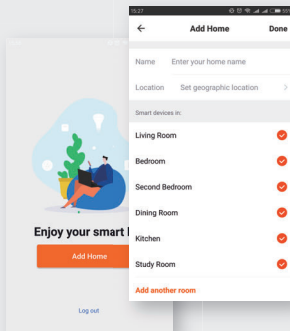

Step 2

Click "Add Home", fill in the information about the Home.

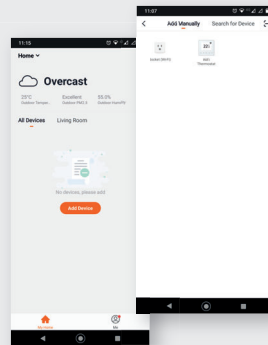


Step 3

Click Add Device or the '+' symbol at the top right corner of the screen. Then click Add Manually followed by WIFI Thermostat.




Step 4

Press the button 'Press to Connect' at the bottom of the screen and it will ask for your WIFI password.

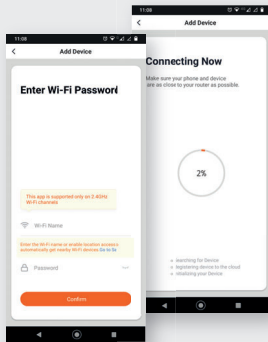


Step 5

Enter your WIFI password from your router ensuring it is accurate and then press Confirm. Your App will now begin the pairing process with the thermostat.

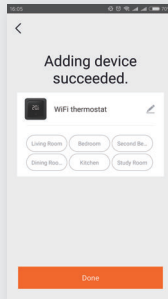

Step 6

When the connection is successful, enter a name for your thermostat e.g. Living Room, and then press Done.

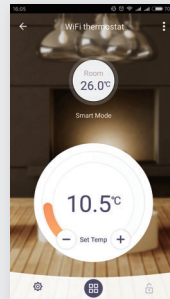


Step 7

Once complete, a firmware update may be required. You will have full access to the thermostat settings and functions via the App.

PAIRING METHOD 2 Connecting WiFi stats using AP mode


Step 1

On the thermostat press and hold the UP and DOWN arrow together until F2 appears, If the code F1 appears release the UP and Down arrows and repeat the steps. Please note F2 will disappear from the screen and the WiFi icon will begin to flash slowly.

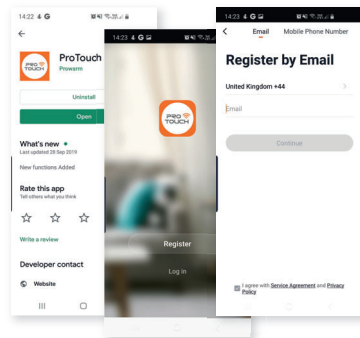


Step 2

Ensure you are connected to your WiFi network and open the ProTouch WiFi application on your device, Once open log in to your account following the steps on screen.

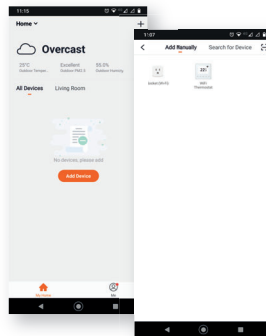


Step 3

In the ProTouch Application press the Plus symbol at the top of the screen to add a new device, select WiFi Thermostat.

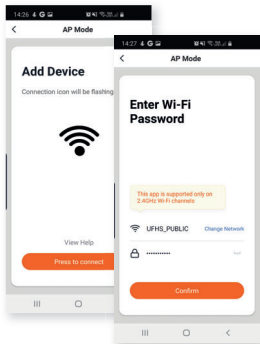

Step 4

On the add device screen you need to select AP Mode in the top right corner, once AP Mode is selected press the orange button “Press to Connect” and enter your WiFi details. Please make sure these details are correct. Ensure you have selected the correct WiFi network and that the password you enter is accurate, as this will not work if miss typed. Press the orange button “Confirm”.

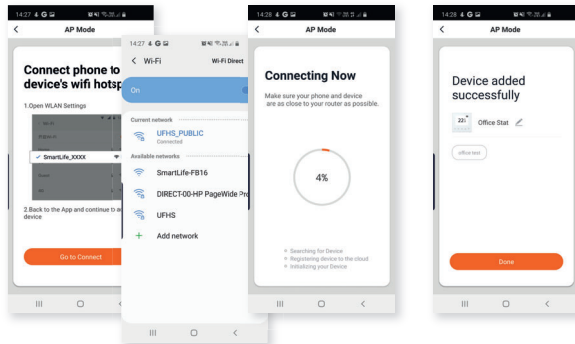

Step 5

Continue following steps that appear on screen pressing the orange button “Go to Connect” this will open your Phones WiFi Settings. Select WiFi hotspot named SMARTLIFE-XXXXXX, once connected to SMARTLIFE-XXXXXX return back to the ProTouch Application.

NB: When using an iPhone you will need to click on ‘Otherwise’ followed by AP mode.

Step 6

Once the connection process is complete press done, a firmware update maybe required. Once complete the thermostat will be accessible via the application

THERMOSTAT DESCRIPTION

The new ProTouch WiFi is a smart thermostat used to control your electric floor heating system or water heating system. It will keep your home at comfortable temperature whilst minimizing energy use. Install the app on your smart phone to control your heating system remotely with the WiFi thermostat.



MAIN FUNCTIONS

- ✓ Power consumption monitor (in APP)
- ✓ Holiday function
- ✓ Time display
- ✓ Hold function
- ✓ Key-lock
- ✓ Open window detection
- ✓ Off time frost protection
- ✓ Floor temperature limitation
- ✓ Optimum start

THERMOSTAT DESCRIPTION

TECHNICAL SPECIFICATION

Supply voltage: 50/60Hz 220-240V AC


Max load: 16A

Standby power: < 2W IP rating: IP21

Max wire diameter: $\leq 2.5\text{mm}^2$

PROTOUCH Smart Thermostat

DISPLAY SYMBOLS

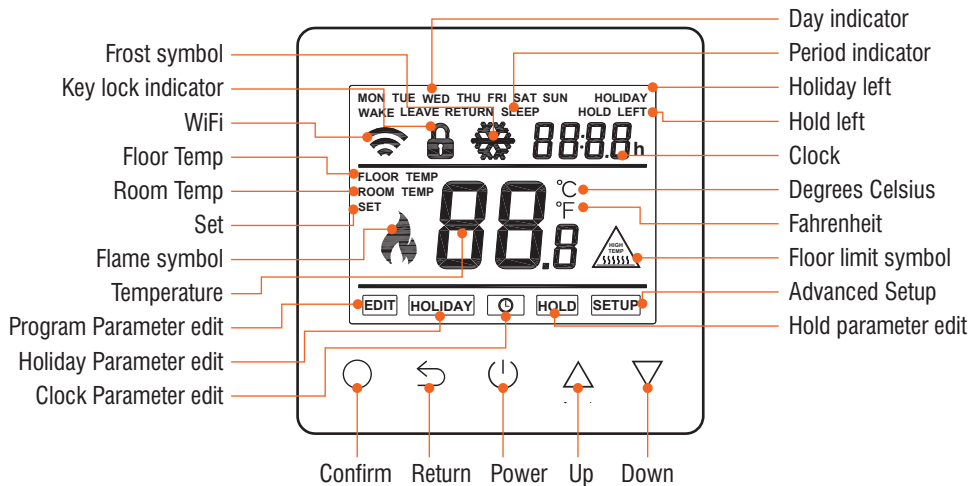


FUNCTION & USER OPERATION

Press to turn on/off

Note: When frost protection mode is active, the thermostat will maintain the frost protection temperature when in power 'off' mode.

Set the Time

In normal timed power 'on' mode, Press  and the CLOCK symbol will flash.

Press  again to enter day set.



Press  or  to set day.

Press  to confirm and enter hour set.

Press  or  to set hour.



Press  to confirm and enter minute set.

Press  or  to set minute.


Press  to confirm then press  to revert to normal screen.

Note: The WiFi version updates the time automatically when connected to internet.

Temporarily override temperature

In normal timed power 'on' mode, press  or  to change the current period temperature setting. The new set temperature will flash for 30 seconds. The thermostat will revert to the normal programmed setting at the start of the next time period.

Key-lock

Setting Key-lock can prevent children and others from switching thermostat parameters. In normal timed power 'on' mode, press  for 3 seconds to lock the thermostat and again for 3 seconds to cancel.

Holiday mode

The thermostat will maintain frost protection temperature until the holiday days ends.

In normal timed power 'on' mode, press ○ to enter setting.

Press △ or ▽ to select HOLIDAY.

Press ○ to enter holiday days set.

Press △ or ▽ to set holiday days .

Press ○ to confirm and return to the normal screen.

Note: In holiday mode, 'HOLIDAY LEFT' and the days remaining will show on display.

Set the holiday days to 0 to cancel holiday mode.

Hold mode

The thermostat will maintain a 'Hold Temperature' permanently until the unit is changed back to smart mode or until Hold Mode is turned off.

1. In normal Power 'on' mode, Press ○ to enter bottom menu.
2. Press △ or ▽ to move across to HOLD.
3. Press ○ to enter Hold function settings.
4. Press △ or ▽ to change Hold Mode to 'ON'.
5. Press ○ to confirm and the temperature will now flash.
6. Press △ or ▽ to change the number to the desired temperature (we recommend between 24-27deg for a comfortable floor temperature).
7. Press ○ to confirm and the thermostat will revert to the home screen. HOLD should show on the display.

To turn hold mode OFF, repeat steps 1-4, but in step 4 set the hold mode to OFF instead of ON followed by the 'O' to confirm.

Timer setting

Each day of the week has 4 time periods, you should allot a temperature to each time period. Set the temperature above room ambient temperature and the heating will come on until the desired temperature is reached, or, set the temperature low and the heating will not come on during that time period. The default settings are shown in the table below.

In normal timed power 'on' mode, press \bigcirc to enter setting.

Press \triangle or ∇ to select EDIT.

Press \triangle or ∇ to select the day to be set.

Press \triangle or ∇ to select the period to be set.

Press \triangle or ∇ to select start time hour.

Press \triangle or ∇ to select start time minute.

Press \triangle or ∇ to select temperature.

Press \bigcirc to enter day selection.

Press \bigcirc to enter period selection.

Press \bigcirc to enter start time set.

Press \bigcirc to enter minute set.

Press \bigcirc to enter temperature set.

Press \bigcirc to confirm and move on to next time period.

Press \leftarrow to revert to normal screen.

Period parameter table (Default)

Day	Wake	Leave	Return	Sleep
Mon - Fri	07:00 22°C	08:30 19°C	17:00 22°C	22:00 19°C
Sat - Sun	08:00 22°C	08:30 22°C	17:00 22°C	22:00 19°C



No.	Name	Default value	Ranges
1	Room temperature calibration	0°C	- 5°C -- 5°C
2	Floor temperature calibration	0°C	- 5°C -- 5°C
3	Frost protection mode	ON	OFF/ON
4	Frost protection temperature	5°C	5°C -- 15°C
5	Sensor selection	01: Floor sensor	00: Built-in sensor 01: Floor sensor 02: Both sensors
6	Floor temperature limit(both sensors)	30°C	20°C -- 50°C
7	Temperature unit	00: °C	00: °C 01: °F
8	Output delay	00: 00s	00: 00 s 01: 30 s 02: 60 s 03: 90 s
9	Switching Differential	01: 1.0°C	00: 0.5°C 01: 1.0 °C 02: 2.0 °C 03: 3.0 °C
10	Reverse output	00: OFF	01: ON 00: OFF
11	Schedule	00: 7	00: 7 01: 5+1+1
12	Adaptive function	00:OFF	00: OFF 01: ON
13	Reset	00: No	00: No 1: YES

ADVANCED SETTING

1. Room temp calibration: Calibrate the temp detected by room sensor.

2. Floor temp calibration: Calibrate the temp detected by floor sensor.

3-4. Frost Protection Mode: Frost protection allows the thermostat to turn on if the temperature drops below 5 degrees even when it is not programmed to. * displays when you turn off the thermostat.

5. Sensor selection:

00 Room sensor: Run by room sensor.

01 Floor sensor: Run by floor sensor.

02 Both sensors: Run by room sensor with floor temp limit.

6. Floor temp limit: If you choose both sensors, floor temp limit must be set to protect floor.

7. Temp unit: °C and °F can be selected.

8. Output delay: This option help you avoid inadvertent operation on heating.

9. Switching Differential: The number of degrees the temperature has to change before the unit switches on/off. The default is 1 degree so if the temperature is set to 21 degrees the thermostat will switch on at 20.5 degrees and off at 21.5 degrees. 0.5 degrees either side of 21.

10.Reverse output: This function is designed to operate cooling systems. The unit will click on when the room is too hot and click off when the room has cooled down.

11. Schedule: Select a weekly schedule for the Edit. There are 2 options:

7: each day from Mon to Sun can be set individually.

5+1+1: 5 days from Mon to Fri have the same events, Sat and Sun can be set individually.

12. Adaptive function: After several days of installation and use, Adaptive function ensures that the required temp has already been reached when the next event begins.

13. Reset: All parameters are restored to default values.

ADVANCED SETTING (Please refer to table above)

Caution: These are normally set by technicians during initial installation.

In normal timed power 'on' mode, press ○ to enter setting.

Press △ or ▽ to select SETUP.

Press ○ to enter advanced setting. Each parameter can be accessed by pressing ○ and adjust the values as required using the arrow keys. (The default values are recommended and changing these may adversely affect the way the thermostat works). Press ↵ to revert to normal screen.

Open window detection

This function only works when room sensor or both sensors is selected. The thermostat with this function will shut off automatically for 15 min when the window opens, as it can detect that the room temp plummets..

TROUBLESHOOTING


Fault Codes

E1 = Built-in sensor short-circuit or disconnected.

E2 = Floor sensor short-circuit or disconnected.

Note: Should a sensor fault display, please contact us for assistance.

WIRING INSTRUCTIONS

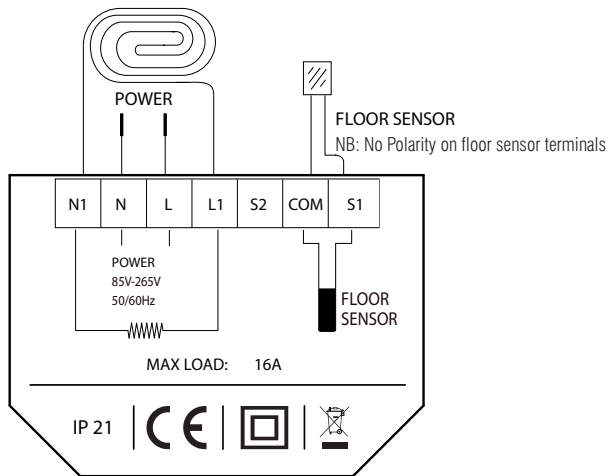

Suggestion: Please keep the max load around 90% of 16A to prolong the lifetime.

Ensure power is disconnected when wiring!

PROTOUCH Smart Thermostat

DIMENSIONS (mm)

